

Thank You for choosing the **Energizer Easy Charger**

Please read this manual before you use the charger,
and save it for reference.

Batteries: Nickel Metal Hydride (NiMH)
Rechargeable batteries

Sizes: AA and AAA

Recommended: Energizer® NiMH Batteries


CHARGING

1. Load Batteries into Charger

- Open the lid at the top and flip down.
- Set to AA or AAA. (Flip lever *down* for AAA).
- Insert batteries to match the polarity marks (+ and -).



- If charging 2 batteries only, place them together either on the left or right side.

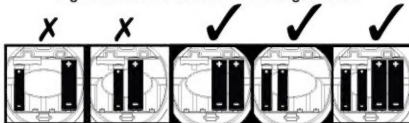


- Close lid.

2. Plug in the Charger

Using either the built-in or changeable plug depending on plug type, plug the charger into a standard AC outlet.

3. Charge

- Push on/off button if charging has not started.
- The Red “charging” LED glows during charging.
- The Green “done” LED glows when complete.
- Take out the batteries or
- Turn charger off with on/off button.

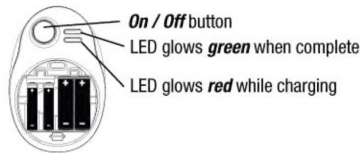

CHARGING TIME

NOTE:
Alternating red/green LED indicates a bad or non-rechargeable battery.

| Battery Size (NiMH) | Rated Capacity (mAh) | Estimated Charging Time | Remark: |
|---------------------|----------------------|-------------------------|--|
| AA | 2650 | 9.0 hr | Batteries will not be damaged if left in the charger longer than the stipulated charging time. |
| AA | 2500 | 8.5 hr | |
| AA | 2000 | 7.0 hr | |
| AAA | 1000 | 10.0 hr | |
| AAA | 900 | 9.0 hr | |
| AAA | 700 | 7.0 hr | |

FEATURES

- One-touch on/off: Push button allows additional control over charger activity.
- LED Charge Indicators.
- Reverse polarity protection guards the charger and batteries from damage if batteries are placed incorrectly.
- Automatic Timer Shut-Off: Turns off the charging current to prevent overcharging AA or AAA batteries. (Timer is reset with on/off button.)
- Universal voltage: 100-240V AC 50/60 Hz

TIPS

- It is normal for batteries to warm up when charging. They will cool down after they are charged.
- Store batteries in a cool, dry place at room temperature.
- Rechargeable batteries gradually lose power when stored. If they are not used for a few weeks, “top them up” to be sure of a full charge.
- Not charging all the way?
 - * Gently rub battery ends with a clean pencil eraser or cloth to remove any residue.
 - * Try completely discharging them and completely charging them again.
- For Best Performance of your Energizer Rechargeable batteries.
 - * Fully Charge your Rechargeable batteries before the first use.

- * Store batteries at room temperature under dry conditions
- * Make sure you use a charger designed to charge NiMH batteries

RECOMMENDED DEVICE USAGE

Rechargeable batteries are ideal for high drain or frequently used devices (more than once a week) and can be charged 100s of time.

- NiMH batteries are a great economical power solution if used in Digital Cameras, MP3 Players, CD players, 2 Way Radios, Walkie Talkies, Remote Control Cars, Game Boys, Photoflash equipment, Toys, Infant Devices and PDAs.
- NiMH batteries are not recommended for:
 - * Remote Controls & Clocks - use Alkaline batteries such as Energizer Max.
 - * Medical & Safety Devices (e.g. smoke detectors) unless they are specifically designed and recommended to use NiMH Rechargeable batteries.

WARNING

To avoid personal injury and property damage from, but not limited to, the risk of electric shock or fire:

- Charge only Nickel Metal Hydride (NiMH) rechargeable batteries. Charging any other types of batteries may cause them to leak, rupture or explode.
- Do not open battery, dispose of in fire, put in backwards, mix with used or other battery types or short circuit – may ignite, explode, leak or get hot causing injury.

- Use the charger only in dry locations. Keep away from rain, snow or excessive moisture.
- Never plug battery chargers into an extension cord.
- Do not operate the charger if damaged.
- Do not disassemble, modify any part of the charger, or attempt to use the charger as a power source.
- Always unplug the charger from outlet before attempting maintenance or cleaning.

SPECIFICATIONS

Model: CHFM

Charges: AA NiMH batteries up to 2650mAh
AAA NiMH batteries up to 1000mAh

Input Voltage: Worldwide voltage : 100-240V AC
50 / 60Hz

Charging Current: 360mA for AA, 120mA for AAA

ONE YEAR WARRANTY

This Energizer product is warranted only to the original purchaser upon presentation of proof of purchase, to be free from defects in materials and workmanship for one year from date of original purchase provided that no other repairs, alterations or modifications had been attempted by unauthorized personnel. Not applicable to damage caused by normal wear and tear or misuse. Repair or replacement of charger at Energizer's option. For more information, please contact your nearest Energizer sales Office.

Energizer Holdings, Inc., St. Louis, MO 63141, U.S.A.